

# ***DISC CLINIC***

## ***INSTRUCTIONS***

**CD's and DVD's nursed back to life**



## **Disc Clinic Instructions**

**CD's and DVD's nursed back to life**

*Disc Clinic cleans and polishes CD's, DVD's, VCD's and CD-ROM's in seconds. By cleaning any surface scratches, it enables a disc to read better. Clean and polished discs prevent tracks from skipping and have less chance of losing vital data.*

### **Contents:**

- A) 2 x Micro-thin fibre pads (replaceable)
- B) Cleaning Solution
- C) Cleaning Brush



***Please read all instructions carefully  
before using Disc Clinic.***

***Safety Instructions***

- *This item is not a toy. Please supervise children when using Disc Clinic.*
- *Ensure the Cleaning Solution is kept out of the reach of children.*
- *Avoid contact with eyes and skin when using the Cleaning Solution.*
- *WARNING: The Cleaning Solution is highly flammable. Keep away from heat, open flames and sources of ignition.*
- *Do not spin the unit when empty.*
- *Do not over spin Disc Clinic when the disc is inserted.*
- *Only use the Cleaning Brush to remove excess dirt from the Fibre Pads. Do not use the Cleaning Brush to clean a disc (risk of damage to disc).*
- *Do not attempt to take the product apart.*
- *Please retain instructions for future reference and new users.*

# Operation Method

**Disc Clinic can be used on the following:**

- CD
- DVD
- CD-ROM
- VCD

**Please note:** Only use the Cleaning Solution provided with Disc Clinic.

- 1) Open Disc Clinic by pressing your thumb onto the front section of Disc Clinic, as referred to in the right hand photo.



- 2) Remove any excess dust and dirt from the Fibre Pads using the Cleaning Brush provided. Please note: Do not use the Cleaning Brush to remove dust and dirt from the disc.



- 3) Spray the disc from a distance of 10cm, with the Cleaning Solution provided. Evenly spray the Cleaning Solution 3-4 times on the underside of the disc (data side), being careful not to spray the label side.



- 4) Place disc into the Disc Clinic. Ensure the sprayed, data side is facing upwards and the label side is facing downwards.



- 5) Close the lid and rotate clockwise by holding onto the rotary knob on top of Disc Clinic. Spin the disc for thirty (30) seconds only. No batteries are needed.




- 6) Open the cover (refer to point 1). Remove the clean disc from inside Disc Clinic. The disc is instantly ready for use.



## **Cleaning Instructions**

*When the Fibre Pads (positioned inside the lid of Disc Clinic) become extremely dirty or worn out, remove and replace with clean Fibre Pads.*

### **How to remove the Fibre Pads**

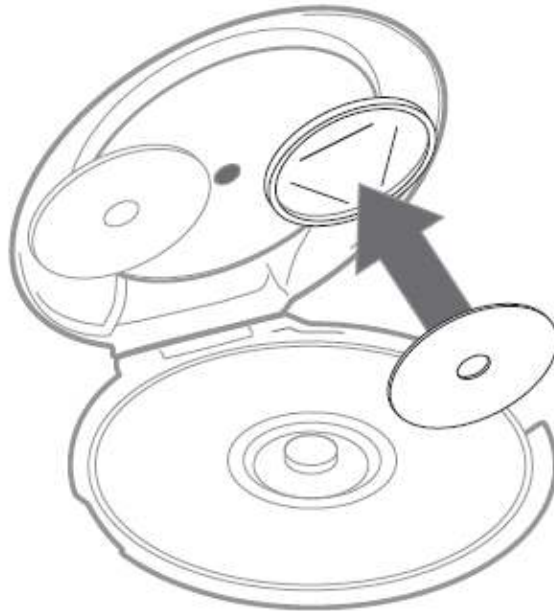

- 1) Open Disc Clinic to see the two Fibre Pads positioned inside the lid.*
- 2) Hold firmly onto the bottom part of the Fibre Pad and carefully prise away the top part by gently pulling the plastic disc towards you. Repeat with second Fibre Pad. Each Fibre Pad is now detached into two parts.*
- 3) Replace with clean Fibre Pads by firmly pushing the pads into position to activate the clip mechanism.*

## **Storage Instructions**

*After use, clean and store Disc Clinic and Cleaning Solution in a cool and dry place.*