

ADMAN

as seen on tv

One-Touch Jar Opener Hints & Tips

- For optimum performance use AA alkaline batteries only
- The Jar Opener is suitable to open regular and vacuum-style glass screw-top jars. Any other use is not recommended. **DO NOT** use Jar Opener on plastic jars.
- **DO NOT** use the Jar Opener to open jars with steep curves, irregular shapes where the jaws drop, or if there are any signs of defects on the jar lid or chipped glass around the jar.
- To prevent toppling and spillage when opening small or tall jars, please secure the jar with one hand and gently hold the Jar Opener with your other hand. Always place the jar on flat non-slippery surface.
- **DO NOT** use the Jar Opener to open jar lids smaller than 1.3 inch (32mm) or bigger than 4 inches (101mm) in diameter.
- To clean the Jar Opener wipe it with a clean, damp, soft cloth. Do not use abrasive cleaners of any kind to clean the Jar Opener. **DO NOT** immerse the Jar Opener in water or any other liquids, as this may cause damage to the product.
- If the Jar Opener leaves up when opening a jar – press the main button fully for one second during the operation to release the Jar Opener and reset to its original position.
- **DO NOT** put your fingers near or in the Jaws during the operation process. In case you want to cease the operation, press the main button once to reset the Jar Opener.

