

ONE·TOUCH™

www.ONETOUCHPRODUCTS.com

AUTOMATIC POWER GRATER



USER MANUAL

Model no.: KC32

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using your Grater.
- Close supervision is necessary when used by or near children.
- Do not operate while under the influence of alcohol or other substances that impair judgement and awareness.
- This Grater is intended for household use only.
- Do not use the Grater in an unintended manner.
- This Grater can be used for cheese, chocolate, breadcrumbs, biscuits and nuts. Do not use with ice or other unspecified materials.
- Avoid contact with moving parts. Keep hands away from moving parts during operation to prevent injury, and/or damage to the Grater.
- There are functional sharp edges on the blades, and they should be handled carefully especially when installing or removing the blades in the Grater, clearing trapped food and during cleaning.
- Do not disassemble spring assemblies.
- The Grater should always be attended at all times when the unit is in operation.
- Grated food should be stored in the refrigerator.
- Do not operate the product after malfunctions, after the blade is deformed, after a drop and/or if other damage occurs.
- Do not store the product in the refrigerator unnecessarily.
- Always remove the batteries before clearing trapping foods or cleaning the product.
- Do not use abrasive materials for cleaning.
- Always replace all batteries at one time and never mix old and new batteries or batteries of different types.


SAVE THESE INSTRUCTIONS

READ THESE INSTRUCTIONS BEFORE FIRST USE

Parts and Functions

fig.1

1. Top Cover
2. Start Button
3. Main Body
4. Battery Cover
5. Main Body
6. Drive Shaft
7. Spring Assembly
8. Cheese Pusher
9. Cheese Divider
10. Coarse Grater
11. Fine Grater
12. Cheese Holder
13. Adapter Plate
14. Storage Box Lid
15. Storage Box

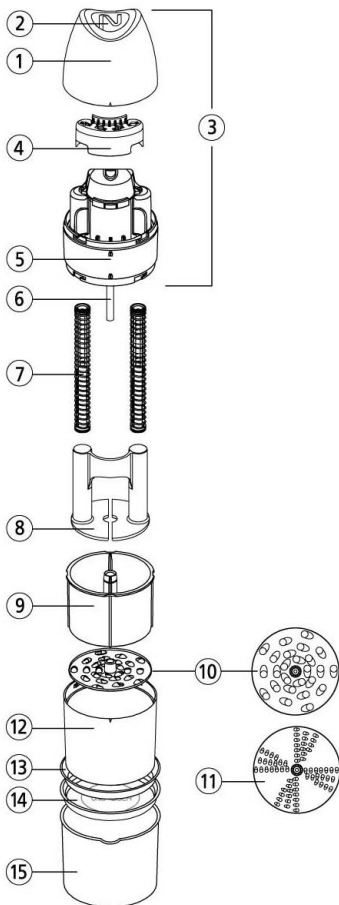

Getting Started

CHANGING BLADE/LOADING CHEESE

1. Grasp the Cheese Holder and twist it clockwise to unlock. (Fig. 2)
2. Remove the Main Body and the Cheese Pusher from the Cheese Holder.





NOTE: When removing the Cheese Holder with some cheese remaining inside, a noticeable spring force will be felt as the Cheese Holder.

3. Take out the Cheese Divider by aligning the gaps and the bumps. (Fig. 3)

4. Place the Blade on the bottom of the Cheese Holder with the Shaft Inlet facing up.
5. Replace the Cheese Divider. (Fig. 4)

6. Distribute the cheese you want to grate evenly in the two chambers. Do not overfill.
(If necessary, cut cheese or chocolate so that it will fit easily into the Cheese Holder.)


7. Push the Main Body and Cheese Pusher back to the Cheese Holder and twist it anti-clockwise to lock. (Fig. 5)

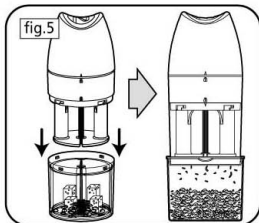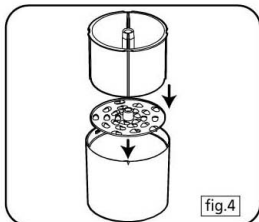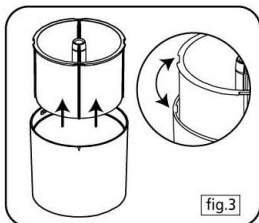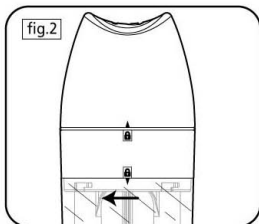

BATTERY INSTALLATION


1. Twist the Top Cover anti-clockwise to unlock. (Fig. 6)

Remove the Top Cover from the Main Body.

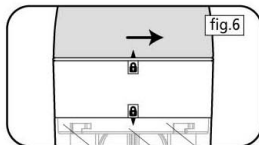


2. **When batteries are not in the battery compartment:**

Grip the sides of the Battery Cover and pull it upwards and towards you. (Fig. 7)

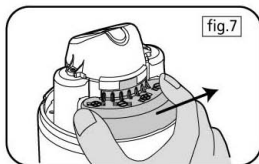

When batteries are inside the battery compartment:


Push downward to release the Battery Cover, then pull it upwards and towards you. (Fig. 8)

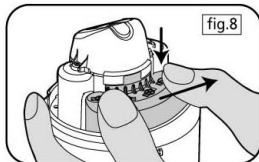

3. Install 4 x AA (LR6) alkaline batteries into the battery compartment according to the polarity (+/-) instruction. (Fig. 9)

4. Replace the Battery Cover by pushing downward and relocking.

5. To replace the Top Cover, align the marks, fit the Top Cover and twist clockwise to lock.

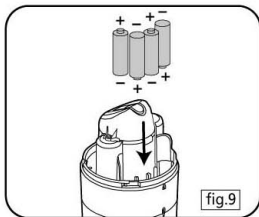

OPERATION

1. Press the Start Button once to grate cheese directly onto your food. (Fig. 10)

OR

2. Press the Start Button when the Grater is seated on top of the Storage Box using the adapter plate. (Fig. 11)



3. Press the Start Button again to stop the operation when you finish grating.
4. The Storage Box Lid can also be used to cover the bottom of the Cheese Holder.

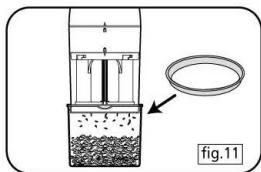


fig.11

CLEANING AND STORAGE

1. All parts, except the Main Body and the Shaft, are completely water and dishwasher safe.
 2. Clean the Main Body and Shaft by using a damp cloth. Never immerse the Main Body, and the Shaft in water or any liquid.
 3. Cheese Pusher and Spring Assembly can be removed from the Main Body for cleaning. First pull the Cheese Pusher out from the Main Body, then pull the Spring Assembly out from the Main Body. (Fig. 12)
 4. For safety, remove Blade from Cheese Holder and store inside the Storage Box.
 5. All parts can be stored inside a refrigerator but not a freezer.
 6. Store the unit out of reach of children.
 7. Always remove batteries when storing the unit for long periods of time.
- NOTE:** Do not use abrasive materials for cleaning.
8. Do not disassemble Spring Assemblies.

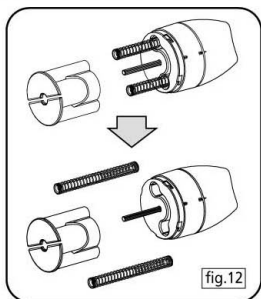


fig.12

Technical Specifications

Dimension: 170 x 80 x 80 mm

Storage Temperature: 4°C to 40°C

Battery: 4 x AA (LR6) alkaline batteries

Disposal

The packaging material can be recycled. Please dispose of it in an environmentally friendly manner and take it to a recycling centre.



If you wish to dispose of this equipment at any point, please also do so in an environmentally friendly manner. It should not be disposed of alongside general household waste. Instead, please take it to recycling point for electrical goods. Your local council will be able to advise you further.

Batteries should not be thrown away in household waste. Please ensure that you always dispose of batteries and rechargeable batteries only when they are empty. Your local council will be able to advise you further.